

ENGLISH

GAME ON

DARTS SCORER



INSTALLATION

To fix scorer to wall it is advisable to drill through the two holes in the unit whilst holding the scorer in the correct position. Plug in to 230 VAC. To connect directly to the power supply unscrew the back and connect directly cutting off the plug cable.

FUNCTIONING

- ON / OFF** button Turns on and off.
- SOUND ON/OFF** Turns sound on and off.
- CANCEL GAMES** Cancels the central partial legs display.
- START 301, START 501, START 701** for immediate start.
Player to start is indicated by flashing coloured light on central leg display. This will flash for 5 seconds and can be changed by pressing START button or ENTER button. This feature alternates after each game.

START XXX Start any score by using this button followed by ENTER. If zero is entered GAME ON will automatically add scores (high score).

1 PLAYER Press this button after having selected your game.

YELLOW BUTTONS Punch in your score and follow by ENTER.
+ **BUTTON** allows you to add all 3 single darts if necessary.
Example: 27 + 25 + 39 ENTER. If an error is made press CANCEL and continue. If an error is made and has already been entered, press MEMORY DOWN and then CANCEL.

MEMORY UP, MEMORY DOWN Allows visual of previous scores and cancelling of errors. If an incorrect score has been entered press MEMORY DOWN and then CANCEL. If the incorrect score has not been entered just press CANCEL.

DARTS Keep pressed to see number of darts thrown during any stage of the game.

AVERAGE Visualizes at any time the average score per dart. The average is shown in two stages : first the whole number and then decimals.
Ex. : 30.45 = 30_ and then _45 To obtain the exact average at the end of game press YELLOW BUTTON 1 if game is closed with first dart, and YELLOW BUTTON 2 if closed with 2nd and press AVERAGE.

OPTIONALS

TELE-IR (infrared telecontrol)

Every scoreboard can work with only one remote control at a time. To tune in a scoreboard with a remote control: stand in front of the scoreboard and keep pressed the **ON-OFF** button on the remote control until the scoreboard turns on and off at least 6 times. This operation takes about 20 seconds. If there are other scoreboards in the same room while tuning, block their reception of the remote control. Power supply: with a 9-Volts alkaline battery. Lifespan: about 140,000 operations. Range: 15 m.

REMOTE CONTROL (separate keyboard with 7 m long cable).
Fasten the keyboard in the most comfortable position for the operator, using the two front screws.